

Digital Kitchen Scale models 00931 / 00932



CONTENTS

| | | | |
|----------------------------------|---|--------------------------|---|
| Package Contents | 2 | Using the Scale | 5 |
| Customer Support | 2 | Troubleshooting | 6 |
| Features & Benefits | 3 | Care & Maintenance | 6 |
| Setup | 4 | Specifications | 6 |
| Install or Replace Battery | 4 | | |

Questions? Contact Customer Support at
(877) 221-1252 or visit www.AcuRite.com.

SAVE THIS MANUAL FOR FUTURE REFERENCE.



Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

Package Contents

1. Scale
2. Instruction Manual

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

24/7 support at www.AcuRite.com

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

Features & Benefits

 
FRONT



FRONT

- 1. Weighing Area**
- 2. Display**
- 3. KG/LB Button**
Toggle between grams (kg:g) or pounds and ounces (lb:oz).
- 4. ON/TARE Button**
Powers the scale ON or OFF, and used for Tare function.


BACK

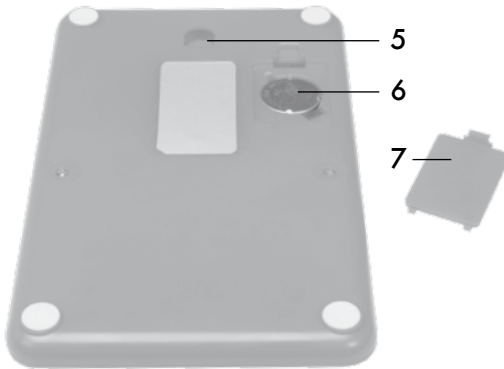

BACK

- 5. Integrated Hang Hole**
for wall mounting storage.
- 6. Battery Compartment**
- 7. Battery Compartment Cover**

 DISPLAY

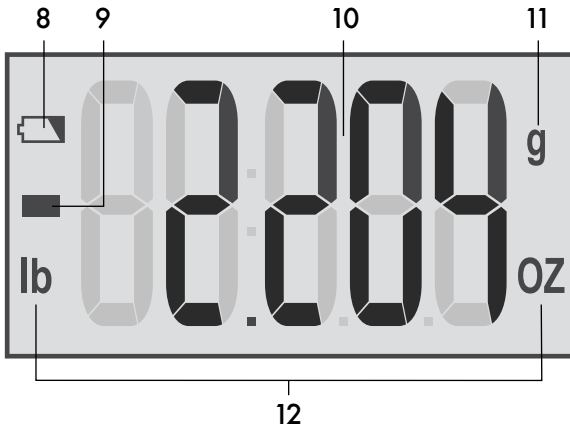


DISPLAY

- 8. Low Battery Indicator**
- 9. Minus Indicator**
Weight of item(s) removed from the scale.
- 10. Current Weight**
- 11. Weight Units Grams (g)**
- 12. Weight Units Pounds & Ounces (lb:oz)**

Install or Replace Battery

 1. Remove the battery compartment cover.
2. Pull the plastic tab below the battery (if applicable) to remove it and discard the tab.
3. Insert 1 x 3V CR2032 lithium battery into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
4. Replace the battery cover.

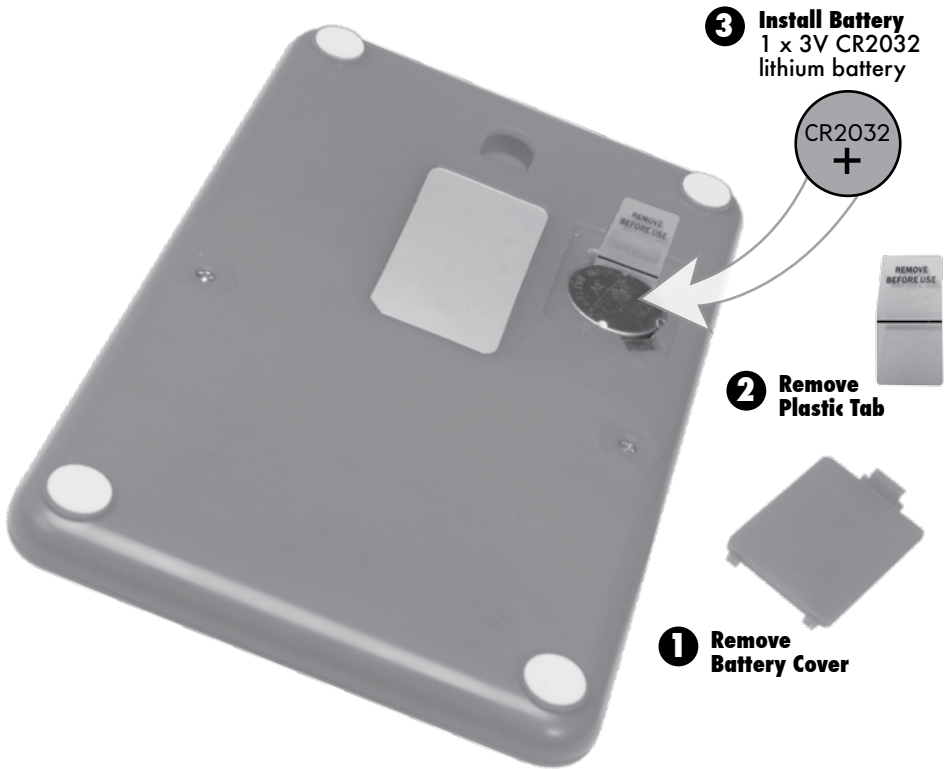

WARNING: THIS PRODUCT CONTAINS A BUTTON-CELL BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY OR DEATH IN JUST 2 HOURS. SEEK MEDICAL ATTENTION IMMEDIATELY IF INGESTED.



Using the Scale

Measure Weight

1. Place the scale on a flat, stable surface.
2. Press the "ON/TARE" button.
3. Wait for the display to show "0.0".
4. Press "KG/LB" button to toggle between grams (kg:g) or pounds and ounces (lb:oz).
5. Place item(s) to be weighed on the scale.
6. Weight will be shown on the display. Press "KG/LB" button to convert between metric and standard units at any time during weighing.

Zero & Tare Functions

To measure items as they are added, use the Zero and Tare Functions.

1. Place the first item(s) on the scale.
2. Without removing the item(s), press "ON/TARE" button to reset the display to "0.0".
3. With the first item(s) still in place, add the next item to the scale. The display will now show the weight of that item.
4. Press "ON/TARE" again to reset the display to "0.0".
5. Repeat these steps (3-4) until all items have been added.

Minus Function

If you add multiple items to the scale at one time to get a total weight, you can measure the weight of a single item or ingredient by using the Minus Function:

1. Add item(s) to the scale.
2. Total weight will be shown on the display.
3. Press "ON/OFF ZERO" button to reset the display to "0.0".
4. Remove item(s).
5. Value shown on the display with the Minus Function indicator (-) indicates the weight of the removed item(s).

Warning Messages



Replace battery (see page 4).



Maximum capacity has been exceeded. Remove items to prevent damage.

Power the Scale ON/OFF

The scale will automatically power off when the display shows "0.0" or the same weight for 1 minute. Press the "ON/TARE" button to power the scale on. To power off manually, press and HOLD the "ON/TARE" button for 3 seconds.

Storage

The scale should be stored in a cool, dry place. The scale can be stored on a level surface or can be hung by using the integrated hang hole.

Troubleshooting

| Problem | Possible Solution |
|-----------------------------------|---|
| Display screen not working | <ul style="list-style-type: none">• Check that the battery is installed correctly. Battery may need to be replaced. |

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.AcuRite.com or call (877) 221-1252 for assistance.

Care & Maintenance

Store in a dry location at room temperature. Clean with a soft, damp cloth. DO NOT immerse in water or use caustic cleaners or abrasives. All parts should be wiped clean immediately after direct contact with foods. Avoid contact with acids and citrus juices. Use the scale on a hard, flat surface. DO NOT strike, shake or drop the scale. Scale is not designed for commercial use.

Specifications

| | |
|----------------------------|---------------------------|
| MAX WEIGHT CAPACITY | 1 kg / 2.2 lb |
| POWER | 3V CR2032 lithium battery |

ACURITE®



Weather
Stations



Temperature
& Humidity



Weather
Alert Radio



Kitchen
Thermometers
& Timers



Clocks

It's more than accurate, it's **ACURITE®**.

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

www.AcuRite.com

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology. Visit www.AcuRite.com/patents for details.