

Digital Kitchen Scale

model 01128



CONTENTS

Package Contents	2	Using the Scale	5
Features & Benefits.....	2	Troubleshooting	6
Setup	4	Care & Maintenance.....	7
Install or Replace Batteries.....	4	Specifications.....	7
Select Measurement Units.....	4	Customer Support	7

Questions? Contact Customer Support at (877) 221-1252 or visit www.AcuRite.com.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

ACURITE®

Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

Package Contents


1. Scale
2. Instruction Manual

Features & Benefits

FRONT

 


FRONT

- 1. Weighing Area**
- 2. MODE Button**
Press to toggle between weight modes.
- 3. Display**
- 4. "  " Button**
Push to turn scale ON/OFF or select between Zero and Tare weight modes.

Features & Benefits


BACK

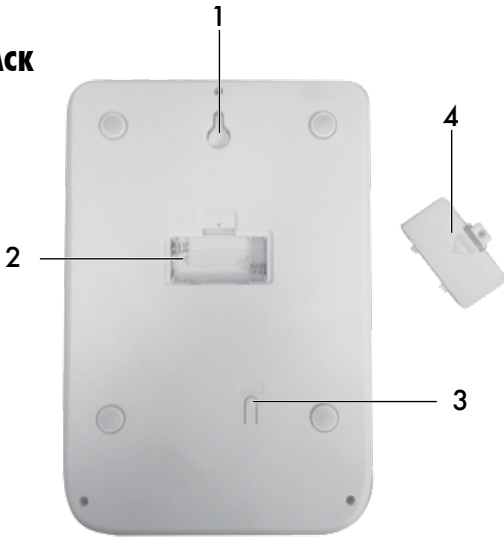

BACK

- 1. Integrated Hang Hole**
For wall-mount storage.
- 2. Battery Compartment**
- 3. UNIT Button**
Push to choose Metric (g, ml) or Imperial (lb:oz, fl'oz) measurement units.
- 4. Battery Compartment Cover**

 DISPLAY

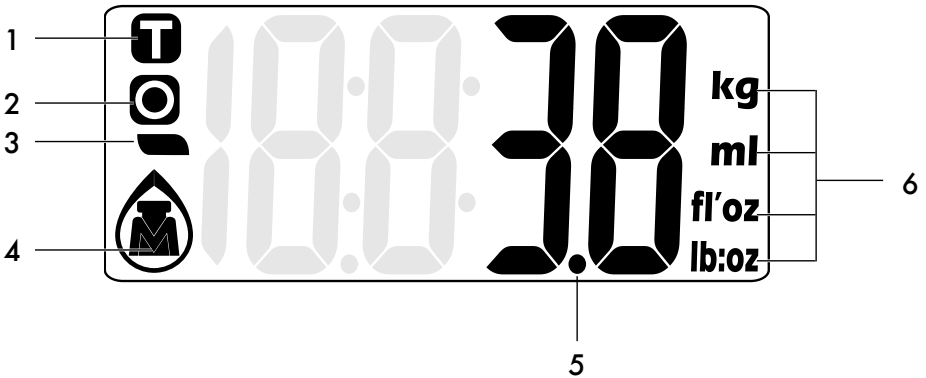


DISPLAY

- 1. Tare Indicator**
- 2. Zero Indicator**
- 3. Minus Indicator**
Indicates weight of item(s) removed from scale.
- 4. Weight Mode Indicator**
Toggle between weight, water, or milk mode.
- 5. Current Weight**
- 6. Measurement Units**

Install or Replace Batteries

AcuRite recommends high quality alkaline batteries for the best product performance. Heavy duty or rechargeable batteries are not recommended.

 1. Remove the battery compartment cover.
2. Insert 2 x AAA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.

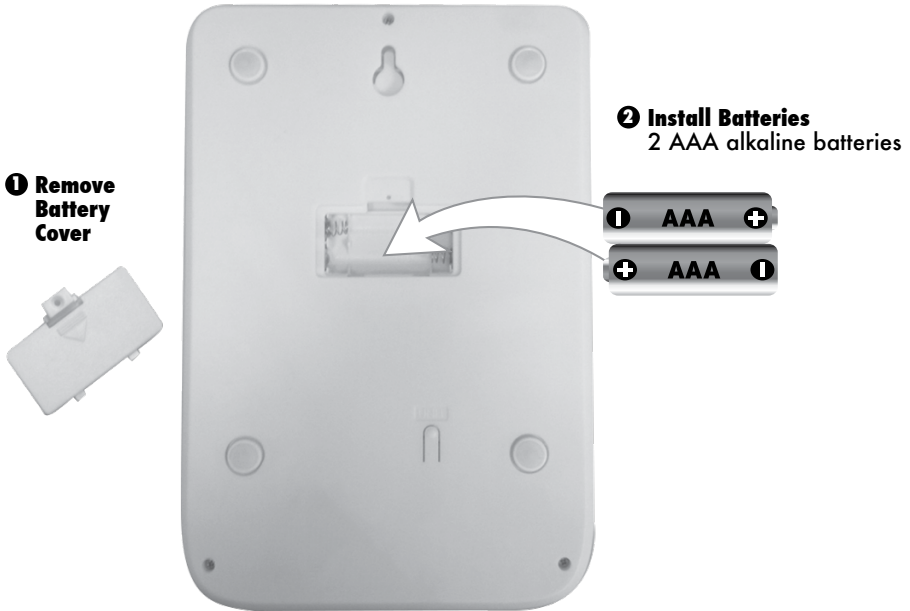

Select Measurement Units

To set the measurement units (Metric or Imperial), press and release the UNIT button, located on the bottom of the scale.



PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.

BATTERY SAFETY: Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment which is not to be used for an extended period of time. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Using the Scale

Measure Weight

The scale's default mode is set to weigh solid items. Volume Mode, used for weighing liquids, allows you to choose between WATER or MILK modes because milk is denser than water. To weigh an item:

1. Place the scale on a flat, stable surface.
2. Gently touch the center of the scale; wait for the display to show 0.
3. To set the mode, press and release the MODE button (toggle between Weight, Water and Milk modes).
4. Place item to be measured within the center of the Weighing Area of the scale.
5. Volume or weight will be shown on the display.



Weight Mode:
g/kg/oz/lb



Water Volume Mode:
ml/fl oz



Milk Volume Mode:
ml/fl oz

Zero & Tare Functions

To measure items as they are added, use the Zero and Tare Functions. If the weight of the items being measured is below 4% of the scale's capacity (less than .04kg/0.9lb), the Zero function is used. If the weight of the items exceeds 4% of the scale's capacity, the Tare function is used.

1. Place the first item(s) within the center of the Weighing Area of the scale to take a measurement.
2. Without removing the item(s), press the ZERO button to reset the display to 0.
3. Depending on the weight of the item(s), you will see the Zero indicator "0" or the Tare indicator "T" on the display.
4. With the first item(s) still in place, add the next item to the surface of the scale. The display will now show the weight of that item.
5. Press the ZERO button to see the combined weight of the two items.
6. Press ZERO button again to reset the display to 0.
7. Repeat these steps until all items have been added.



Note: Adhere to the maximum weight capacity of the scale.

Minus Function

If you add multiple items to the scale at one time to get a total weight, you can identify the value of a single item or ingredient by using the Minus Function:

1. Add item(s) to the scale; display shows total weight.
2. Press the ZERO button to reset display to 0.
3. Remove an item.
4. Display shows the weight of the removed item with the Minus Function indicator (negative value is shown on the display).
5. Press the ZERO button to view cumulative weight of any remaining items.
6. Repeat steps as needed.

Power Saving Mode

The scale will automatically power off if the displays shows "0" or the same weight measurement is showing for 2 minutes. The scale can be manually powered off by pressing the "  " button. when the display shows "0". If the scale is showing a weight measurement, press and HOLD the "  " button for 3 seconds.

Warning Messages

A "Lo" message on the display screen indicates that the batteries will need to be changed. A "Err" message on the display screen indicates that the maximum weight capacity has been exceeded. To avoid damage, remove some weight from the scale.



Troubleshooting

Problem	Possible Solution
Display screen not working	<ul style="list-style-type: none">• Check that the batteries are installed correctly. Batteries may need to be replaced.

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.AcuRite.com or call (877) 221-1252 for assistance.

Care & Maintenance

Store in a dry location at room temperature. Clean with a soft, damp cloth. DO NOT immerse in water or use caustic cleaners or abrasives. All parts should be wiped clean immediately after direct contact with foods. Avoid contact with acids and citrus juices. Use the scale on a hard, flat surface. DO NOT strike, shake or drop the scale. Scale is not designed for commercial use.

Storage

The scale can be stored on a level surface or can be hung by using the integrated hang hole.

Specifications

MAX WEIGHT CAPACITY	5 kg / 11 lbs
MAX VOLUME CAPACITY	5000 ml / 168.7 fl oz
POWER	2 x AAA alkaline batteries

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

24/7 support at www.AcuRite.com

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

ACU>RITE®



Weather
Stations



Temperature
& Humidity



Weather
Alert Radio



Kitchen
Thermometers
& Timers



Clocks

It's More than Accurate, it's ACU>RITE®.

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

www.AcuRite.com