

# Operating and assembly instructions for chains, chain slings and components for slings MAXNORM – grade 12

General principles regarding the utilisation of lifting accessories and their components:

The operating instructions are to be stored together with the certificate and the EC declaration of conformity.

The falling of loads, caused by the failure and / or incorrect utilisation and handling of lifting equipment or its individual parts constitutes a direct risk to the life or health of the people who are present in the danger zone of lifting processes.

These operating instructions contain information with regard to the safe utilisation and handling of the lifting accessories and their components. Before using the lifting equipment, the assigned persons are to be briefed with regard to handling and utilisation by a qualified person.

The following principles apply:

- The Working Load Limit (WLL) (see label) of the lifting equipment must correspond to the load. The lifting equipment may not be used if the label is missing or is illegible. No danger areas (e.g. crushing points, cutting points, trapping or impact points) may occur that may hinder or endanger the person carrying out the slinging process and / or the transport.
- The base material and the constructive design of the load must be able to hold the applied forces without deformation.
- Stress that leads to a non-uniform load distribution, e.g. which is caused as a result of an off-centre introduction of force must be taken into account when selecting the lifting accessories and their components.
- In the event that extreme stress or strong dynamic strain (shock influences) may occur, this must be taken into account when selecting the lifting equipment and the working Load Limit (WLL).
- The lifting equipment may not be used for the transportation of persons. No persons are ever permitted to remain present in the danger area of a suspended load. The lifting equipment may not come into contact with acids and other aggressive agents. Attention must also be paid to the fact that acid fumes may occur in certain production processes.
- Never make unauthorised amendments to the lifting equipment (e.g. grinding, welding, bending, and attachment of parts)!
- The lifting equipment may not be exposed to any forbidden manipulation of temperature.
- Only original replacement parts may be used.
- The relevant additional regulations must be observed when transporting hazardous substances.
- If the accessories and their components must be stored in such a manner that they are protected against being damaged and do not cause any danger. If damaged, the lifting equipment must be immediately taken out of circulation and must undergo maintenance work.
- When ready to be discarded, lifting accessories and their components are to be correctly disposed of. Attention: Any substances present that are hazardous to the environment (e.g. greases and oils) are to be disposed of separately.

Attention: In the event of violation, the operating permission will become void.

#### working Load Limit and temperature use 1.

# Table 1 MAXNORM grade 12 Working Load Limit (WLL) in t

Nominal size	Single-leg	Tw	ro-leg	3- +	4-leg	Endless chain sling choke hitch	Endless c	hain sling	Endless of	chain sling
[mm]		0°-45°	45°-60°	0°-45°	45°-60°		0°-45°	45°-60°	0°-45°	45°-60°
6	1,8	2.5	1,8	3,8	2,7	2,9	2	1,4	3,05	2,1
8	3	4,25	3	6,3	4,5	4,8	3,3	2,4	5,1	3,6
10	5	7,1	5	10,6	7,5	8	5,5	4	8,5	6
13	8,1	11,3	8,1	17	12	13	8,9	6,5	13,8	9,7
16	12,5	17,7	12,5	26,5	18,8	20	14	10	21,2	15
actor										
symmetric	al 1:	1.4	1	2.1	1.5	1.6	1.1 (1.4)*	0.8 (1)*	1.7 (2.1)*	1.2 (1.5)*
In case of an asymmetrical load distribution, the working load limit applicable to the 2- to 4- leg sling types is the same as for single leg sling.										



\*In the event of appropriate usage - not with choke hitch/no sharp edges etc. - the values of the respective chain sling will apply.

For endless chain slings type K13 use masterlinks for 2-leg slings, for K23 use masterlinks for 4-leg slings (see point 2).

In each individual case special attention has to be paid to the maximum temperature which the components for slings are exposed to. The influence of higher temperatures on the working load limit (WLL) of various grades of lifting equipment is stated in Table 2. After cooling down to a temperature beneath 200°C, one can again work with WLL of 100 %. If MAXNORM slings are exposed to temperatures above 300 °C, slings must be discarded. It is not permitted to use these slings again.

Table 2

Temperature range in °C	WLL MAXNORM (grade 12) in %		
minus 60°C - plus 200°C	100		
plus 200°C - plus 250°C	90		
plus 250°C - plus 300°C	75		

Notice: Grade 12 lifting equipment may not be used at temperatures above 300°C.




## 2. Assembly of the lifting accessories

Attention: MAXNOR<sup>M</sup> lifting equipment cannot be combined with products other than grade 12 and / or products from other manufactures. When assembling chain slings, special attention must be given to the nominal size and grade. Every finished assembled piece of slinging equipment must be labelled in accordance with the European Machinery Directive.

accordance with the European Machinery Directive. Special attention must be paid to masterlinks, clevis heads and chains when using MAXNORM - Slings. Depending on the chain size, the masterlinks are marked as follow:



# ATTENTION : MAXNORM masterlinks and clevis heads are <u>not</u> foolproof.

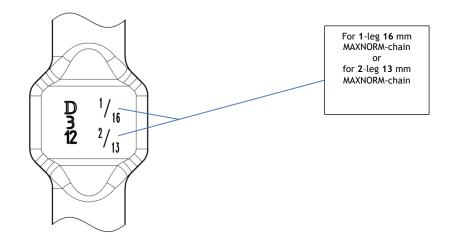

2.1 Assembly of the clevis head assembly system



The JDT components are coordinated to one another with regard to the nominal size and are labelled with the respective nominal size.

- Insert the clevis head in the masterlink of matching size.
- Introduce the chain into the respective clevis head.
- Insert the bolt and secure with the locking pin. Use the locking pin only once.

## 2.2 Assembly of the shortening elements

See separate assembly instructions

# 3. Utilisation of the sling chains

The regulations of DGUV Regel 109-017 / respective country-specific directives are to be observed when sling chains are used.

# 3.1 Bringing into service – before the first time use

- Before the lifting equipment is used for the first time, it has to be ensured that:
- The lifting equipment exactly corresponds to the order;
- The testing certificates are present (acceptance test certificate, declaration of conformity, etc.);
- The labeling and working load limit (WLL) details on the lifting equipment correspond to the details on the test certificates (see Tables 1 and 2).

## 3.2 Handling of the load

Before each use, the lifting equipment has to be inspected for evident defects or characteristics of wear. Proceed according to the maintenance guidelines in the event that damage is observed (see Point 5).

- The weight of the load must be known.
- The centre of gravity of the load must be known.
- Chain slings are always to be deployed with a straight leg. They are not permitted to be twisted and must not display kinks or knots. Lifting hooks must be secured with a latch.

Attention : All clevis heads must positioned in the base of the masterlink before taking up load.

The chains may not be pulled over sharp (radius  $\leq$  chain diameter) edges if they are not protected. Edge protection must be provided in such a case or the working load limit (WLL) is to be reduced by 20 %.

# $\underline{\wedge}$

#### •

3.3 Multi-leg chain slings

An angle of inclination between 6° and 60° must be present. When being used in a choke hitch, the working load limit (WLL) is to be reduced to 80 %.

Generally, chain slings should only be used for their intended purpose. However, cases occur in reality where not all individual legs are used at the same time. In such cases, the working load limit is to be reduced according to Table 3:

Table	3
-------	---

Type of chain sling	Number of individual legs used	Usage factor compared to the stated Working Load Limit (Table 1)
Two leg	1	1/2
three- / four leg	2	2/3
three- / four leg	1	1/3

Individual legs that are not being used should be hung back into the master link in order to avoid danger caused by the chain swinging or by unintended hooking during the lifting process.

In case of an asymmetrical load distribution, the working load limit applicable to the 2- to 4- leg sling types is the same as for single leg sling.



#### Storage of lifting equipment 4.

Lifting equipment not in use should be stored on a frame that is intended for this purpose. After usage, the equipment should not be left lying on the floor as it can be damaged there.

The lifting equipment is to be protected against corrosion in the event that it is not expected to be used in the near future.


In the event that chain slings with hooks remain on the crane hook without a load, the hooks are to be hung into the master link.

#### Inspection and maintenance

On a regular basis before being used, lifting equipment is to be closely inspected with regard to correct utilisation and faultless condition (e.g. screw fit, absence of strong corrosion and deformation, etc.), for example by the person carrying out the slinging process. Defective lifting equipment may not be used. It has to be tested at least once a year by a qualified person whilst taking the relevant standards (EN 818-6) and trade association regulations (e.g. DGUV Regel 109-017 [formerly DGUV 100-500]) into account. Every three years lifting equipment must be tested by a qualified person using a proper testing device in order to check that the product is free of cracks. JDT recommends a magnetic particle inspection up to a coating thickness of 50 µm.

The user must observe the results of the risk assessment in accordance with the occupational safety directives. The re-testing period is shortened in the event that the products are exposed to critical operating conditions. Inspection records are to be kept. The testing coefficient (EC-Machinery Directive 2006/42/EC Point 4.4.1) is defined according to the standards DIN EN 818 ff. / PAS 1061 and / or DIN EN 1677 ff.

- In the event that the following defects occur, the lifting equipment is to be taken out of circulation immediately and sent for maintenance: Labelling concerning working load limit or proof of identity of the lifting equipment is illegible or is missing.
- Deformation of master links, chain or components for slings (Figure 1).
- Inadmissible wear or elongation of individual chain links is present for example, in the event that the nominal dimension of the inner length has been exceeded by 5 %, which meet an outside elongation of 3 % (Figure 2).
- Reduction of the mean chain link thickness at any point of >10 % (Figure 3).
- Clear length differences in the chain legs when dealing with multi-leg chain slings.
- Acc. to the standard the hook aperture can be max. 10 % higher than the nominal size "m" in the catalogue. In order to simplify the measuring, the wear can be
- determined with help of the triangles. This maximum size is forged into the hook (figure 4). Or the hook safety latch may not be released (Figure 6). In order to determine the wear on the bottom of the hook the web height can be measured in the marked area. The minimal height must not be less than the height indicated at the lower part of the hook (Figure 5).
- Damage such as: cuts, indents, grooves, linear cracks, excessive corrosion, discolouration caused by the impact of heat, bent or twisted chain links or other faults. Reduction in bolt diameter of 10% compared to its nominal dimension (catalogue).

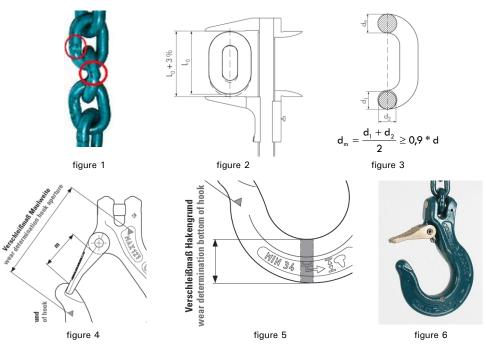

#### 6 Maintenance

The maintenance must be carried out by an expert. Chains and components that are ready to be discarded must be replaced. The entire chain leg is to be replaced even if only one chain link das to be discarded. In the event that bolts have to be replace, only new original bolts and safety elements may be used.

#### Documentation

Records of regular testing (Point 5) and maintenance (Point 6) are to be documented. JDT offers professional support with this work as well as the >sBase< PC program that electronically captures and manages the lifting equipment.



Translation of the original operating instructions In case of doubts or misunderstanding, the German version of the document is decisive. 8. Conformity Declaration



#### EG-Konformitätserklärung der Fa. JDT

EG-Konformitätserklärung EC Conformity Declaration Déclaration de conformité CE EG-Conformiteitsverklaring Declaración de conformità CE Dichiarazione de conformità CE EY-yhdenmukaisuustodistus EF-Overensstemmelseserklæring EG-Konformitetsförklaring Deklaracia zgodności WE Im Sinne der EG Richtlinie Maschinen 2006/42 EG und weiter ergänzender Richtlinien. As defined by the EC Guideline Machines 2006/42 EG and other complementary guidelines. Dans le sens des directives CE Machines 2006/42 EG en verdere aanvullende richtlijnen. Conforme a la Directiva CE de Måguinas 2006/42 EG en verdere aanvullende richtlijnen. A is senci della direttiva CE de Måguinas 2006/42 EG et verdere aanvullende richtlijnen. Koneista annetun EY-direktlivin 2006/42 EY ja muiden lisädirektlivien tarkoittamassa mielessä. I overensstemmelse med EF-retningslinie maskiner 2006/42 EF og videre supplerende retningslinier. I enlighet med EG : s Maskindirektiv 2006/42 EG samt vidare kompletterande direktiv. W rozumieniu dyrektywy maszynowej WE 2006/42/WE oraz uzupelniających dyrektyw.

Der Unterzeichnende, bevolimächtigt von den/The undersigned, empowered by/Le soussigné, mandataire de/De ondergetekende, gemachtigde van de firma/ El suscrito, autorizado por la/II sottoscritto, delegato dalla/Allekirjoittanut, yhtiön/Den undertegnede, befuldmægtiget af/förklarar undertecknad, bemyndigad av Niżej podpisany, upoważniony przez

#### J.D. Theile GmbH & Co. KG, Postfach 18 29, D-58213 Schwerte

erklärt, dass das (die) umseifig bezeichnete(n) Anschlagmittel in der von uns in Verkehr gebrachten Ausführung bei bestimmungsgemäßer Benutzung mit den grundliegenden Sicherheits- und Gesundheitsanforderungen übereinstimmen. declares that sling gear, listed overleaf, conform in its marketed design with the requisite basic safety and health requirement, provided they are used in accordance with their

Intended purpose. déclare que le matériel de levage décrit au verso et employé conformément aux prescriptions, dans l'exécution mise en circulation par nos soins, est conforme aux exigences fondamentales de sécurité et de santé. verivaart dat de op de achterzijde aangegeven aanslagmiddelen in de door ons in het verkeer gebrachte uitvoering bij doelmatig gebruik met de pricipièle eisen omtrent

verklaart dat de op de achterzijde aangegeven aanslagmiddelen in de door ons in het verkeer gebrachte uitvoering bij doelmatig gebruik met de pricipiële eisen omtrent veiligheid en gezonderheid overeenstemmen.

declara que el/(los) dispositivo/(s) de suspensión mencionado/(s) al dorso en la forma lanzada al mercado concuerdan con los requiremientos básicos impuestos a la seguridad y a la salud bajo la condición de una aplicación de acuerdo con los fines previstos. dichiara che ili(i) dispositivo(i) di arresto definito(i) a tergo, nel modello da noi distribuito, se usato(i) nel modo dovuto risponde (rispondono) al requisiti basilari de sicurezza e


valtuuttamana vakuuttaa, että kääntöpuolella mainittu/tut kiinnitysväline/et myyntiin tuomassamme moudossa ja sitä/niitä asianmukaisesti käytettynä ovat perustavanlaatuisten

turvallsuus- ja terveysvaatimusten kansa yhdenmukaisia. erkazere, at det (de) omstående anslagsmidel (-midler) i den udfarelse, som vi har givet den ud, ved bestemmelsens benyttelse stemmer overens med de grundlæggende

sikkerheds- og sundhedskrav. att det (de) på omstående sida uppförda anslagmedlet (-medlen) i det av oss sålda utförandet vid ändamålsenlig sanvändning överensstämmer med de grundläggande kraven

an dei (de) på omsteende ska upprorda anslagmediet (-medien) i det av oss sakda utkrandet vid andamaisening sanvandning overensstammer med de grundlaggande kraven beträffande säkensen et ekternin kradti menerungi utervensionen i energiene et en ekterniste et energiene et ekterniste et ekterniste

odwiadcza, że wymienione na odwrocie środki mocowania w wersji wprowadzonej przez nas na rynek są zgodne z zasadniczymi wymogami dotyczącymi bezpieczeństwa i ochrony zdrowia w przypadku zastosowania zgodnego z przeznaczeniem.

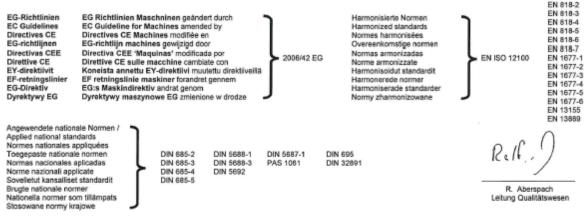

Dokumentationsverantwortlich: R Aberspach in Fa. J.D. Theile, Letmather Str. 28-45, D-58239 Schwerte

#### UKCA Declaration of Conformity

The undersigned, empowered by

## J.D. Theile GmbH & Co. KG, Postfach 18 29, D-58213 Schwerte, Germany

declares that sling gear, listed overleaf and marked with UKCA, conform in its marketed design with the requisite basic safety and health requirement, provided they are used in accordance with their intended purpose.

Applicable standards :

UK Guideline Supply of Machinery (Safety) regulation 2008 BS EN 818-1 - BS EN 818-7 BS EN 1677-1 - BS EN 1677-6 BS EN ISO 12100 / BS EN 13155 / BS EN 13899

( ellado M

T. Muchowski Managing Director

Rev 1