


# ComAnt LP Installation instructions

S (mm)			
LP80-N	664	LP80-TNC	661
LP150-N	354	LP150-TNC	353
LP230-N	258	LP230-TNC	257
LP350-N	185	LP350-TNC	183
LP400-N	160	LP400-TNC	156
LP900-N	97	LP900-TNC	96
LP2400-N	102	LP2400-TNC	97

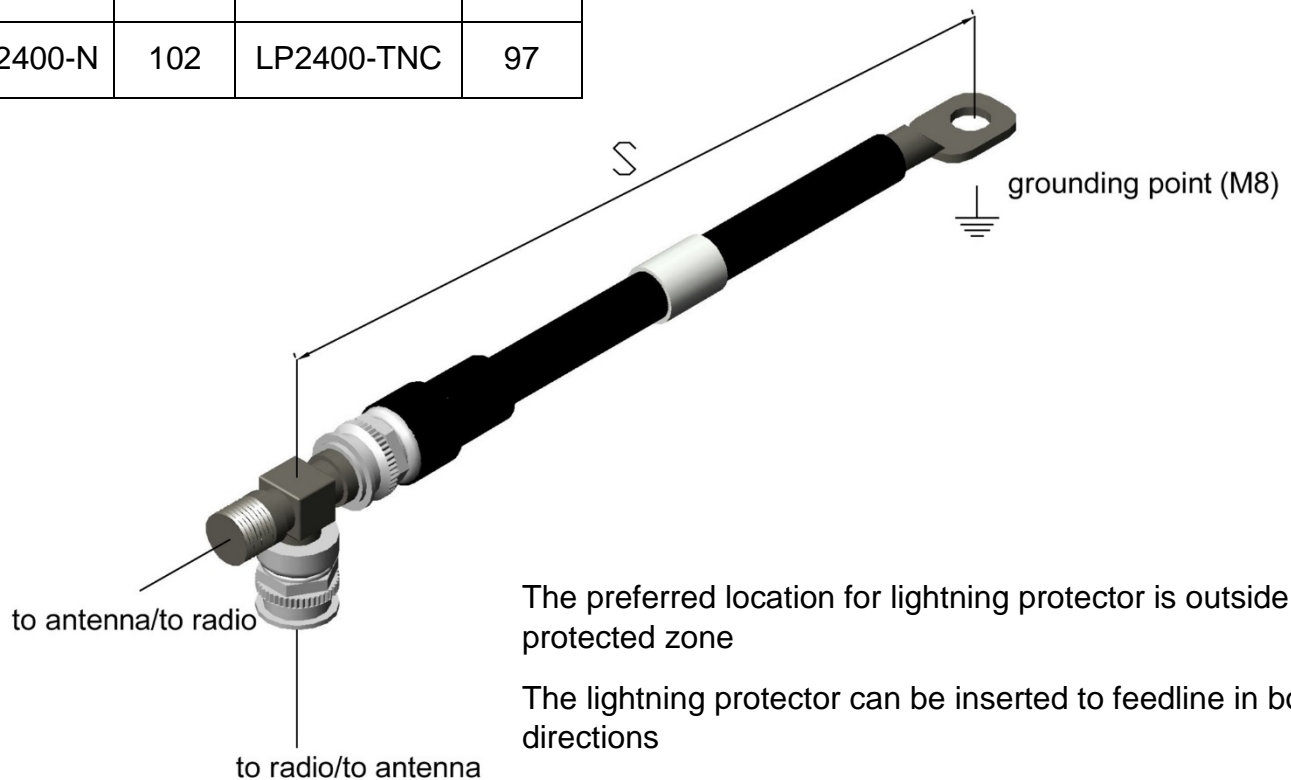

The preferred location for lightning protector is outside of protected zone

The lightning protector can be inserted to feedline in both directions

Grounding to central grounding bar or equivalent grounding cables of minimum 16 mm<sup>2</sup>

Grounding point is mounted by properly tightened M8 bolt

The contact surfaces at the grounding point shall be clean and dry

LP-N (N-female - N-male) is IP 67

LP-TNC (TNC-female - TNC-male) is IP62

For proper weather protection all connectors and cable junctions should be covered by self-amalgamating tape or equivalent